


**Test Equipment  
Depot**

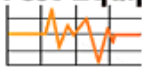

1-800-517-8431

**AC/DC True RMS Power Clamp Meter**

**BK PRECISION<sup>®</sup>**

**ELECTRONIC TEST INSTRUMENTS  
MODEL 325**



**CE**

# CONTENTS

1. FEATURES .....	2
2. Safety precaution .....	2
Symbols Description .....	3
3. Specifications.....	4
4. Electrical Specifications .....	4
800A rms .....	4
800Arms (60 second).....	4
DC 500V AC500V rms .....	5
600V rms .....	6
DC600V .....	6
AC600V rms.....	6
5. Instrument Description (fig.1).....	6
6. Alignment marks .....	8
7. Measurement .....	8
7-1. DC Current (DCA) measurement .....	8
7-2. AC Current (ACA) measurement.....	9
7-3. DC Voltage (DCV) measurement .....	10
7-4. AC Voltage (ACV) measurement.....	10
7-5.AC+DC Watt Measurement.....	11
7-6.Resistance measurements.....	11
7-7.Continuity Tests.....	12
7-8.Frequency measurements .....	13
7-9.Function key descriptions .....	13
? HOLD function.....	13
? ZERO relative function.....	14
? MAX MIN function .....	14
? PEAK –H (PEAK HOLD) function.....	15
? AUTO POWER OFF function.....	16
7-10. Measuring non-sinusoidal quantity .....	16
? TRUE RMS MEASUREMENT.....	16
? WAVEFORM COMPARISON .....	17
? Battery Replacement .....	18
? Maintenance and Cautions .....	19

---

## 1. FEATURES

Thank you for purchasing this instrument. Please read this instruction manual carefully and completely before using the digital clamp meter. Correct operation will insure the best performance and decrease the possibility of damages.


## 2. SAFETY PRECAUTION










 
### CAUTION

Take extreme care for the following conditions while measuring

1. Measuring voltage over 20V as it may cause human body electricity conduction.
2. Measure AC power.
3. Do not measure voltage, current under humid or wet environment.
4. If any unusual condition (such as: breakage, deformation, fracture, foreign substance, no display, etc.) of the test leads end (metal part) and attachment of the meter, please do not conduct any measurement.
5. Do not contact any exposed metal (conductive) parts, such as : end of test lead, jack, fixing object, circuit, etc.
6. Keep you insulated from the object waiting for being measured.
7. Do not operate the meter under the environment with explosive gas (material), combustible gas (material) steam or filled with dust.


- 
8. In order to avoid reading incorrect data, replace the battery immediately when the symbol  appears on the LCD.
  9. In order to avoid the damage caused by contamination or static electricity, do not touch the circuit board before you take any adequate action.
  10. Operating Environment: Indoors use. This instrument has been designed for being used in an environment of pollution degree 2.
  11. Operation Altitude: Up to 2000M.
  12. Operating Temperature & Humidity: 5? ~ 40? ,below 80%RH.
  13. Storage Temperature & Humidity: -10? ~ 60? , below 70%RH.
  14. Fingers should hold under the protection guard of test probe.
  15. Category: EN 61010-1(2001) and EN 61010-2-032(2002) CAT? 600V & CAT? 1000V

#### 16. SYMBOLS DESCRIPTION

- |   |  |
|---|--|
|    | DC Voltage or Current  |
|  | AC Voltage or Current  |
|  | DC/AC Voltage or Current   |
|  | Ground   |
|  | Meter Double insulated   |
|  | Caution  |
|  | Danger high voltage: risk of electric shock                                |
|  | Application around and removal from hazardous live conductors is permitted |

---

### 3. SPECIFICATIONS

1. Display: 3 3/4 digits LCD with max. reading 3999, plus decimal point, unit symbol indication.
2. Overload Indication: LCD will show "OL" in the left highest position.
3. Low Battery Indication: Replace battery immediately when LCD displays .
4. Sampling Rate: 2 times per second for digital display.
5. Power Supply: 9V NEDA 1604 IEC 6F22 JIS 006P battery x 1pc.
6. Battery Life: About 200 hours.
7. Jaws opening: Max. 36 mm.
8. Conductor size: Max. 35mm.
9. Dimension: 218mm(L)x75mm(W)x43mm(H).
10. Weight: About 375g. (Including battery)
11. Accessories : Test Leads ? manual? carrying case ? battery.

### 4. ELECTRICAL SPECIFICATIONS

Accuracy:  $\pm(\text{.}\% \text{rdg} \dots \text{dgt})$  at 23 $\pm$ 5 $\text{?}$  , below 80 $\text{?}$  RH

#### DCA

Range	Resolution	Accuracy	Overload Protection
400A	0.1A	$\pm(1.5\%+5)$	800A rms (60 second)
600A	1A	$\pm(2.0\%+5)$	

#### ACA

Range	Resolution	Accuracy	Overload Protection
		50Hz-60 Hz	
400A	0.1A	$\pm(2.0\%+5)$	800Arms (60 second)
600A	1A	$\pm(2.5\%+5)$	

## AC CURRENT (TRUE RMS:From 10% to 100% of range)

Range	Resolution	Accuracy		Overload Protection
		40Hz~65Hz	65Hz~1kHz	
400A	0.1A	$\pm (2.0\%+5)$	$\pm (3.0\%+8)$	800A rms (60 second)
600A	1A	$\pm (2.0\%+5)$	$\pm (3.0\%+8)$	

## CURRENT 1 mS PEAK HOLD

Range	Resolution	Accuracy	Overload Protection
400A	0.1A	$\pm (1.5\%+15)$	600V rms
600A	1A	$\pm (2.5\%+15)$	

## DC VOLTAGE

Range	Resolution	Accuracy	Overload Protection
400V	0.1V	$\pm (1.0\%+3)$	600V rms
600V	1V		

## AC VOLTAGE (TRUE RMS:From 10% to 100% of range)

Range	Resolution	Accuracy		Overload Protection
400V	0.1V	40Hz~400Hz	400Hz~2kHz	600V rms
600V	1V	$\pm (1.2\%+5)$	$\pm (2.0\%+5)$	

Input Impedance: 10M $\Omega$ / less than 100Pf.Crest factor : >3 :1.


## VOLTAGE 1 mS PEAK HOLD

Range	Resolution	Accuracy	Overload Protection
400V	0.1V	$\pm (1.5\%+15)$	600V rms
600V	1V	$\pm (2.5\%+15)$	

## AC+DC WATT

Range	Resolution	Accuracy	Frequency	Overload Protection
40KW	0.01KW	$\pm (5.0+5)$	0~1KHz	600V rms
400KW	0.1KW	$\pm (5.0+5)$		

## Continuity Test

Range	Resolution	Buzzer	Max. Open Voltage	Overload Protection
	1 $\Omega$	Lower 400 $\Omega$	About 1.2V	DC 500V AC500V rms

## RESISTANCE

Range	Resolution	Accuracy	Max. Open Voltage	Overload Protection
-------	------------	----------	-------------------	---------------------


4000Ω	1Ω	±(1.0%+3)	0.4V <sub>DC</sub>	600V rms
-------	----	-----------	--------------------	----------

### Frequency Test

Range	Resolution	Accuracy	Max. Sensibility	Overload Protection
4KHZ	1HZ	±(0.5%+3)	5Vrms	DC600V AC600V rms
40KHZ	10HZ			
400KHZ	100HZ			

## 5. INSTRUMENT DESCRIPTION (fig. 1)

1. Inductive clamp jaw.
2. Safety guard.
3. HOLD button
4. Rotary switch Selector.
5. MAX/MIN key.
6. LCD
7. V/O Jack
8. COM Jack
9. PEAK-H
10. ZERO button.
11. Jaw Trigger.

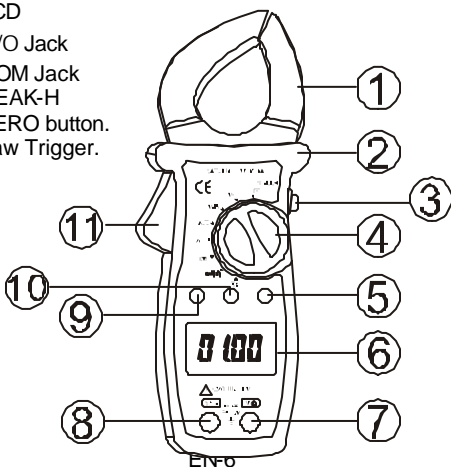

---

## 6. ALIGNMENT MARKS

Put the conductor within the jaws on intersection of the indicated marks as much as possible (Figure 2) in order to meet the meter accuracy specifications.

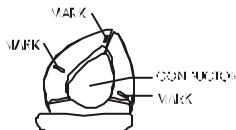


Fig.2

## 7. MEASUREMENT

### 7-1. DC CURRENT (DCA) MEASUREMENT



#### WARNING

Make sure that all the test leads are disconnected with the meter's terminal for current measurement.

1. Set the rotary switch to **A**  $\equiv$ .
2. Check if the display shows zero in advance. If the display doesn't show zero, press ZERO key.
3. Open the clamp and put the tested conductor in the center of the clamp jaw taking care to comply with the current flow shown in the label placed inside the Inductive clamp jaw and indicates.
4. The current value will be indicate on the display with automatic detection of the appropriate range.
5. If the reading is preceded by the "-" sign check if the current flow comply with consideration indicated.

- 
6. If the reading is difficult, press the HOLD key to hold the obtained value. To exit from this function press HOLD key again. The analogy barograph isn't affected of enabling of this function.

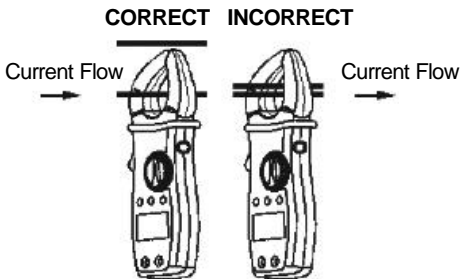


Fig.3

## 7-2. AC CURRENT (ACA) MEASUREMENT



### WARNING

Make sure that all the test leads are disconnected with the meter's terminal for current measurement.

1. Set the rotary switch to **A ~**.
2. Open the clamp and put the tested conductor in the center of the clamp jaw.
3. The current value will be indicate on the display with automatic detection of the appropriate range.
4. If the reading is difficult, press the HOLD key to hold the obtained value. To exit from this function press HOLD key again. The analogy barograph isn't affected of enabling of this function.

---

## 7-3. DC VOLTAGE (DCV) MEASUREMENT



### WARNING

Max. input for DCV or ACV is 600V. Do not attempt to take any voltage measurement which exceeds the limits. Exceeding the limits could cause electrical shock and damage the clamp meter.

1. Set the rotary switch to **V**
2. Plug the test leads into the jacks. The red test lead plugs into V/O jack, and the black test lead plugs into COM jack.
3. Connect the two long ends of test leads with the desired circuit, and then the reading will be displayed with automatic detection of the appropriate range.
4. If the reading is preceded by the "-" sign check if the Voltage polarity comply with consideration indicated.
5. If the reading is difficult, press the HOLD key to hold the obtained value. To exit from this function press HOLD key again. The analogy barograph isn't affected of enabling of this function.

## 7-4. AC VOLTAGE (ACV) MEASUREMENT



### WARNING

Max. input for DCV or ACV is 600V. Do not attempt to take any voltage measurement which exceeds the limits. Exceeding the limits could cause electrical shock and damage the clamp meter.

1. Set the rotary switch to **V**

- 
2. Plug the test leads into the jacks. The red test lead plugs into V/O jack, and the black test lead plugs into COM jack.
  3. Connect the two long ends of test leads with the desired circuit, and then the reading will be displayed with automatic detection of the appropriate range.
  4. If the reading is difficult, press the HOLD key to hold the obtained value. To exit from this function press HOLD key again. The analogy barograph isn't affected of enabling of this function.

## 7-5.AC+DC WATT MEASUREMENT

1. Set the rotary switch to KW.
2. Plug the test leads into the jacks. The red test lead plugs into V/O jack, and the black test lead plugs into COM jack.
3. Connect the two long ends of test leads with the desired circuit, Inductive clamp jaw on to the active line, then reading will be displayed with automatic detection of the appropriate range.
4. If the reading is difficult, press the HOLD key to hold the obtained value. To exit from this function press HOLD key again. The analogy barograph isn't affected of enabling of this function.

## 7-6.RESISTANCE MEASUREMENTS



### WARNING

Before measuring the resistance, please be sure to remove power from the circuit being tested and discharge all the capacitors. If the reading is over range, the symbol "OL" will be displayed.

- 
1. Set the rotary switch to  $\text{V}\Omega$  .
  2. Plug the test leads into the jacks. The red test lead plugs into V/O jack, and the black test lead plugs into COM jack.
  3. Connect the two long ends of test leads with the desired circuit, then the reading will be displayed with automatic detection of the appropriate range.
  4. If the reading is difficult, press the HOLD key to hold the obtained value. To exit from this function press HOLD key again. The analogy barograph isn't affected of enabling of this function.

## 7-7.CONTINUITY TESTS



### WARNING

Before measuring the resistance, please be sure to remove power from the circuit being tested and discharge all the capacitors. If the reading is over range, the symbol "OL" will be displayed.

1. Set the rotary switch to  $\text{V}\Omega$  .
2. Plug the test leads into the jacks. The red test lead plugs into V/O jack, and the black test lead plugs into COM jack.
3. Connect the two long ends of test leads with the desired circuit, then the reading will be displayed while the buzzer sounds when the resistance value lower then 300 $\Omega$  approximately.
4. If the reading is difficult, press the HOLD key to hold the obtained value. To exit from this function press HOLD key again. The analogy barograph isn't affected of enabling of this function.

---

## 7-8.FREQUENCY MEASUREMENTS



### WARNING

Max. input for DCV or ACV is 600V. Do not attempt to take any voltage measurement which exceeds the limits. Exceeding the limits could cause electrical shock and damage the clamp meter.

1. Set the rotary switch to Hz.
2. Plug the test leads into the jacks. The red test lead plugs into V/O jack, and the black test lead plugs into COM jack.
3. Connect the two long ends of test leads with the desired circuit, then the reading will be displayed with automatic detection of the appropriate range.
4. If the reading is difficult, press the HOLD key to hold the obtained value. To exit from this function press HOLD key again. The analogy barograph isn't affected of enabling of this function.

## 7-9.FUNCTION KEY DESCRIPTIONS

### ? HOLD function

1. The HOLD function allows operator to hold the displayed digital values. When this function is enabled the display shows the "H" symbol.
2. The HOLD function will be disabled if:
  - The HOLD key is pressed again.
  - The position of the rotary switch is changed.
3. The analogy barograph isn't affected of enabling of this function so it continues showing present readings.

---

## ? ZERO relative function

- 1.The ZERO relative function subtracts an OFFSET (stored when the key has been pressed) from the present measurements and displays the result.
- 2.To enable this function press the ZERO key for less than 1 second. Consequently on the display will appear the message "ZERO" and the relative value.
- 3.Pressing the ZERO key again for less than 1 second the display will show the offset; and the message "ZERO" start blinking.

## ? MAX MIN function



### WARNING

Before pressing MAX/MIN button, please take off test leads from circuit and/or Voltage / Ohm jack to prevent electric surge cause high MAX figures.

1. This function allows the instrument to store the MIN and MAX values of the quantity selected with the rotary switch.
2. To enable this function press the MAX/MIN key less than 1 second; consequently on the display will appear the message "MAX". In this mode the clamp measures and shows the maximum value of the selected quantity. This value will be automatically update if a bigger value will occur.
3. Pressing again the MAX/MIN key less than 1 second, the message "MIN" will appear on the display. In this mode the clamp measures and shows the minimum value of the selected quantity.

---

This value will be automatically update if a lower value will occur.

4. Pressing again the MAX/MIN key less than 1 second, the blinking message "MAX MIN" will appear on the display. In this mode the clamp measures and store the minimum and the maximum values of the selected quantity. To get the minimum or maximum stored value press less than 1 second the MAX/MIN key until the display shows the desired quantity.

**The MAX/MIN function will be disable if:**

- The MAX/MIN is pressed for more than 1 second.
- The position of the rotary switch is changed.

### ? **PEAK –H (PEAK HOLD) function**

1. Set the rotary switch to  $V_{\sqrt{2}}/A_{\sqrt{2}}$  range.
2. Set the PEAK-H mode by pressing the PEAK-H >2 sec, The PEAK-H function will enter to calibration mode, the LCD will show "CAL" and the internal buffer will remember the internal OP offset voltage then back to the  $600V_{\sqrt{2}}$  or  $600A_{\sqrt{2}}$  range.
3. The display shows Pmax to indicate the PEAK MAX and shows Pmin to indicate the PEAK MIN. (See Fi g 4)

\* Under PEAK-H, the bargraph always show current value.

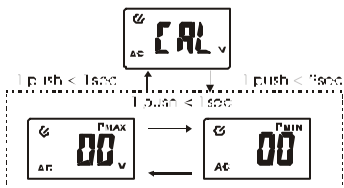



Fig 4

**The PEAK-H function will be disable if:**

- The PEAK-H is pressed for more than 1 second.
- The position of the rotary switch is changed.

### ? AUTO POWER OFF function

1. In order to save the battery the clamp will be switched off 30 minutes later last selecting function or changing range operation.
2. If this function is enabled the symbol is  displayed.
3. To disable this function select OFF position then select the  $V_{\sim}$  position while the MAX/MIN key is pressed.
4. Turning OFF and ON the clamp the AUTO POWER OFF will be re-enabled.

## 7-10. MEASURING NON-SINUSOIDAL QUANTITY

### ? TRUE RMS MEASUREMENT

The meter measures the true RMS value of AC voltages and currents. In physical terms, the RMS (root-mean-square) value of a waveform is the

equivalent DC value that causes the same amount of heat to be dissipated in a resistor. True RMS measurement greatly simplifies the analysis of complex AC signals. Since the RMS value is the DC equivalent of the original waveform, it provides a reliable basis for comparing dissimilar waveforms.




 
 

 
By contrast, many meters use average-responding AC converters rather than true RMS converters. The scale factor in these meters is adjusted so that they display the RMS value for a harmonic-free sine wave. However, if a signal is not sinusoidal, average-responding meters do not display correct RMS readings.

## ? WAVEFORM COMPARISON

Table 1 illustrates the relationship between AC and DC components for common waveforms, and compares readings for true RMS meters and average-responding meters. For example, consider the first waveform, a 1.414V (zero-to-peak) sine wave. Both the 325 and RMS-calibrated average-responding meters display the correct RMS reading of 1.000V (the DC component equals 0). However, consider the 2V (peak-to-peak) square wave. Both types of meter correctly measure the DC component (0V), but your TM-28E also correctly measures the AC component (1.000V). The average-responding meter measures 1.111V, which amounts to an 11% error.

**Table 1. WAVEFORM COMPARISON CHART**

	Peak Value	Metered Voltages		Total RMS
		True RMS	Average-Responding	

AC coupled Input Waveform	Peak - Peak	0-Peak	RMS CAL (*)	27E	DC components only	TRUE RMS $\sqrt{I_{ac}^2 + I_{dc}^2}$
Sine 	2.828	1.414	1.000	1.000	0.000	1.000
Rectified sine (Full Wave) 	1.414	1.414	0.421	0.436	0.900	1.000
Rectified sine (Half Wave) 	2.000	2.000	0.779	0.771	0.636	1.000
Square 	2.000	1.000	1.111	1.000	0.000	1.000
Rectified square 	1.414	1.414	0.875	0.707	0.707	1.000
Rectangular pulse 	2.000	2.000	$4.442K^2$	2K	2D	$2\sqrt{D}$
Triangle Sawtooth 	3.464	1.732	0.962	1.000	0.000	1.000

(\*) RMS CAL is the displayed value for average responding meter that are calibrated to display RMS for sine waves.

**Crest Factor = Peak value/True value**

## ? Battery Replacement



### WARNING

If the symbol "" appears on the LCD, please replace the battery immediately.

1. Before operating the battery replacement, please remove all test leads and the conductor.
2. Set the range to OFF position.
3. Remove the screws from the battery cover with screwdriver, and detach the battery cover from the bottom cover.
4. Remove the battery from battery holder carefully, (replace it with new 9V NEDA 1604 IEC 6F22 JIS 006P battery x 1pc.

- 
5. Put the battery cover back to its right place and tighten it with screws.

### ? **Maintenance and Cautions**

1. This meter is a precision digital instrument. Whether in use or in storage, please do not exceed the specification requirements to avoid any possible damage or danger
2. during in operation.
3. Do not use strong / abrasive detergents , water or wet cloth to clean the instrument.
4. Do not put the instrument in high temperature or in humid condition. Being exposed to direct sunlight is prohibited.
5. After finishing the measurement, please turn the rotary switch to off position. Remove the battery from battery holder if the instrument is not be used for a long period in order to avoid the liquid leakage from the battery.
6. Regarding to the other requirements for inspection and maintenance which are not stated in the manual, a qualified technician is necessary.