



Model 45118 Mini Thermo-Anemometer

- Air Velocity and Temperature Dual Display
- Wind-chill Display
- Data Hold, Average, and Auto OFF features
- Selectable Air Velocity measurement units



1. INTRODUCTION

Congratulations on your purchase of Extech's 45118 Mini Thermo-Anemometer. This professional meter, with proper care, will provide years of safe reliable service.

2. SPECIFICATIONS

2.1 General Specifications

Display	Dual LCD with multifunction indicators
Measurements	Knots, km/h, MPH, ft/min, m/sec, Beaufort force, windchill, and temperature (C/F)
Wind-speed	Moving 2 second average with 2 second gust detect
Sensor	Sapphire bearing, non-corrosive vane for air velocity and precision thermistor for temperature
Average Mode	Choice of 5, 10, or 13 second average readings
Max Display	Push button highest reading recall
Data hold	Freeze most recent display
Sample time	1 reading per second
Water-resistant	To 3' (1 meter)
Min/Max wind-speed	1.1 to 62.5 MPH
Operating temperature	5 to 122°F (-15 to 50°C)
Operating humidity	< 80% RH
Power supply	Lithium battery type CR-2032 or equivalent
Battery life	400 hours approx.
Weight	3 oz. (95 g)
Dimensions	Instrument: 5.25 x 2.75 x 0.75" (133 x 70 x 19mm) Vane: 1" (24mm) diameter

2.2 Electrical Specifications

Measurement	Range	Resolution	Accuracy
MPH (Miles per hour)	1.1 to 62.5 MPH	0.2 MPH	± (3%rdg +0.4MPH)
km/hr (kilometers per hour)	1.8 to 100.6 km/h	0.7 km/h	± (3%rdg +1.4km/h)
Knots (nautical miles per hour)	1.0 to 54.3 knots	0.3 knots	± (3%rdg +0.6knots)
m/sec (meters per second)	0.50 to 28.00 m/s	0.01 m/s	± (3%rdg +0.2m/s)
ft/min (feet per minute)	100 to 5500 ft/min	20ft/min	± (3%rdg +40ft/min)
Beaufort force	1 to 17 BF	1 BF	± 1
Temperature	0 to 122°F	0.1°F	±1.8°F
	-18 to 50°C	0.1°C	±1°C

3. METER DESCRIPTION

- 1 Vane impeller
- 2 Precision thermister
- 3 LCD display
- 4 POWER and HOLD key
- 5 UNITS and MODE key
- 6 Battery compartment (on rear)
- 7 Swivel handle and storage case
- 8 Lanyard holder
- 9 Impeller set screw (on rear of meter)



4. OPERATION

- 4.1 **Select the desired units** for air velocity and temperature by momentarily pressing the UNITS/MODE key from a powered down condition. The LCD will show temperature units (°C or °F) and Air Velocity units. Press the UNITS/MODE key repeatedly until the desired units are displaying. When finished, press the ON/OFF/HOLD key momentarily to restart the meter with the desired units.
- 4.2 **Power the meter** by pressing the ON/OFF/HOLD key momentarily. The Dual Display will illuminate. The top (larger) display indicates air speed and the lower display indicates temperature.
- 4.3 **Position the meter** so that the measured airflow enters the meter vane from the rear of the meter (opposite side from the front panel logo, part number, etc.).
- 4.4 **Activate Data Hold** (to freeze the most recent display), by pressing and holding the ON/OFF/HOLD key while taking measurements. To return to normal operation, release the key and restart the meter.
- 4.5 **Max operation:** After a measurement session, press and hold the UNITS / MODE key until the MAX icon appears on the lower left-hand side of the LCD. Both the Air Velocity and Temperature indication will represent the highest readings measured since the meter was last powered.
- 4.6 **Average mode operation:** Normally the meter averages readings every 2 seconds. To select 5, 10 or 13 second averaging, first press and hold the UNITS/MODE key until the MAX icon appears. Next, press the key again momentarily and the AVG icon will appear. The 13 second average mode is selected. Now press the key again and the number 5 will appear. Leave it there if an average of 5 seconds is desired. Press the key once more for a 10 second average mode. To return to normal operation press the UNITS/MODE key repeatedly until all lower left-hand icons disappear.
- 4.7 **Wind chill indicator:** Press and hold the UNITS/MODE key until the MAX icon appears. Press the key repeatedly until the WCI icon appears. The temperature display will now factor in the wind chill. To return to normal operation, press the UNITS/MODE key again and the WCI icon will disappear.
- 4.8 **AUTO POWER OFF:** After approx. 20 mins, if meter keys are not touched, the meter automatically shuts down to preserve battery life.

5. BATTERY REPLACEMENT

If the meter will not power up as usual or the display contrast becomes weak and difficult to read, replace the lithium battery. To do so, turn the battery compartment cover in a CLOCKWISE direction to remove it. The battery will be visible in the battery compartment, observe the position of the battery and replace the new one in the same position. Affix the battery compartment cover by turning it in a COUNTER-CLOCKWISE direction. Dispose of the lithium battery in accordance with local, state, or national waste disposal codes.

6. VANE IMPELLER REPLACEMENT

NOTE: The anemometer is very accurate at low and mid-range air speeds. Constant use at very high speeds may damage the impeller's bearing and reduce over-all accuracy.

- 6.1 To replace the impeller, remove the set screw next to the impeller assembly (on the rear of the meter). Twist the impeller assembly counter-clockwise to the "O" (open) position and remove it.
- 6.2 Install the new impeller by inserting and twisting the new impeller assembly clockwise then tighten the set screw.

USEFUL EQUATIONS AND CONVERSIONS


Area equations:

Rectangular Duct



$$A = W \times H$$

Circular Duct

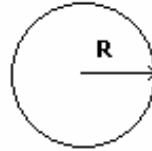

$$A = \pi \times R^2$$

Cubic equations:

$$\text{CFM (ft}^3/\text{min)} = \text{Air Velocity (ft/min)} \times \text{Area (ft}^2\text{)}$$

$$\text{CMM (m}^3/\text{min)} = \text{Air Velocity (m/sec)} \times \text{Area (m}^2\text{)} \times 60$$

Units Conversion Table

	m/s	ft/min	knots	km/h	MPH
1 m/s=	1	196.87	1.944	3.6	2.24
1 ft/min=	0.00508	1	0.00987	0.01829	0.01138
1 knot=	0.5144	101.27	1	1.8519	1.1523
1 km/h=	0.2778	54.69	0.54	1	0.6222
1 MPH=	0.4464	87.89	0.8679	1.6071	1

Beaufort Conversion Table

Beaufort	Km / Hour	MPH	Knots	Meter/Sec
0	<1	<1	<1	0-0.2
1	1-5	1-3	1-3	0.3-1.5
2	6-11	4-7	4-6	1.6-3.3
3	12-19	8-12	7-10	3.4-5.4
4	20-28	13-18	11-16	5.5-7.9
5	29-38	19-24	17-21	8.0-10.7
6	39-49	25-31	22-27	10.8-13.8
7	50-61	32-38	28-33	13.9-17.1
8	62-74	39-46	34-40	17.2-20.7
9	75-88	47-54	41-47	20.8-24.4
10	89-102	55-63	48-55	24.5-28.4
11	103-117	64-72	56-63	28.5-32.6
12 (- 17)	above 117	above 72	above 63	above 32.6



[Back to the 45118 Product Info Page](#)



[Visit us at www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)