

FLUKE®

FlukeView Forms

Documenting

Software

Installation Guide



99 Washington Street
Melrose, MA 02176
Phone 781-665-1400
Toll Free 1-800-571-8431



Visit us at www.TestEquipmentDepot.com

For Installation assistance, please contact Fluke @ Fluke.com

PN 2076262

September 2003

© 2003 Fluke Corporation, All rights reserved. Printed in U.S.A.

All product names are trademarks of their respective companies

System Requirements for FlukeView Forms Software

- **Windows Operating System:** Windows 95, 98, 2000, Me, XP, or Windows NT 4.0
- **PC Hardware:**
 - Pentium class or better microprocessor
 - 32 MB RAM
 - 70 MB free disk space (100 MB to install)
- Administrator privileges required to install software on Windows 2000, XP, or Windows NT 4.0.

Installing FlukeView Forms from the FlukeForms CD

1. Insert the CD into your CD-ROM drive.
2. A window appears that lists options on the CD. If the window does not automatically appear:
 - a. On the Windows taskbar, select **Start**, then **Run**.
 - b. Type `d:\viewer.exe` (where `d:` is your CD drive letter).
3. Select **Install Software**.
4. Select **Install FlukeView Forms**.
5. Follow the installation instructions that appear.

FlukeView Forms Documentation

The following documentation is provided with FlukeView Forms:

Documentation	Format / Where to Find	Use For
Users Manual	Adobe Acrobat / Available on the <i>FlukeView Forms</i> CD, and installed with the software	Basic operation and overview
Meter Connection Pages		Step-by-step instructions for connecting each type of meter
Tutorials		Step-by-step instructions for common tasks.
Online Help	Windows Help / <i>FlukeView Forms</i> Help menu	On-the-spot application help
Technical Notes	Adobe Acrobat / Available at www.fluke.com and on the <i>FlukeView Forms</i> CD	Detailed technical information



[Back to the FlukeView Product Info Page](#)



[Visit us at www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)

For Installation assistance, please contact Fluke @ Fluke.com