



SmartReader Plus 8

Monitoring Concrete Curing with the SmartReader Plus 8
Thermistor Temperature Logger

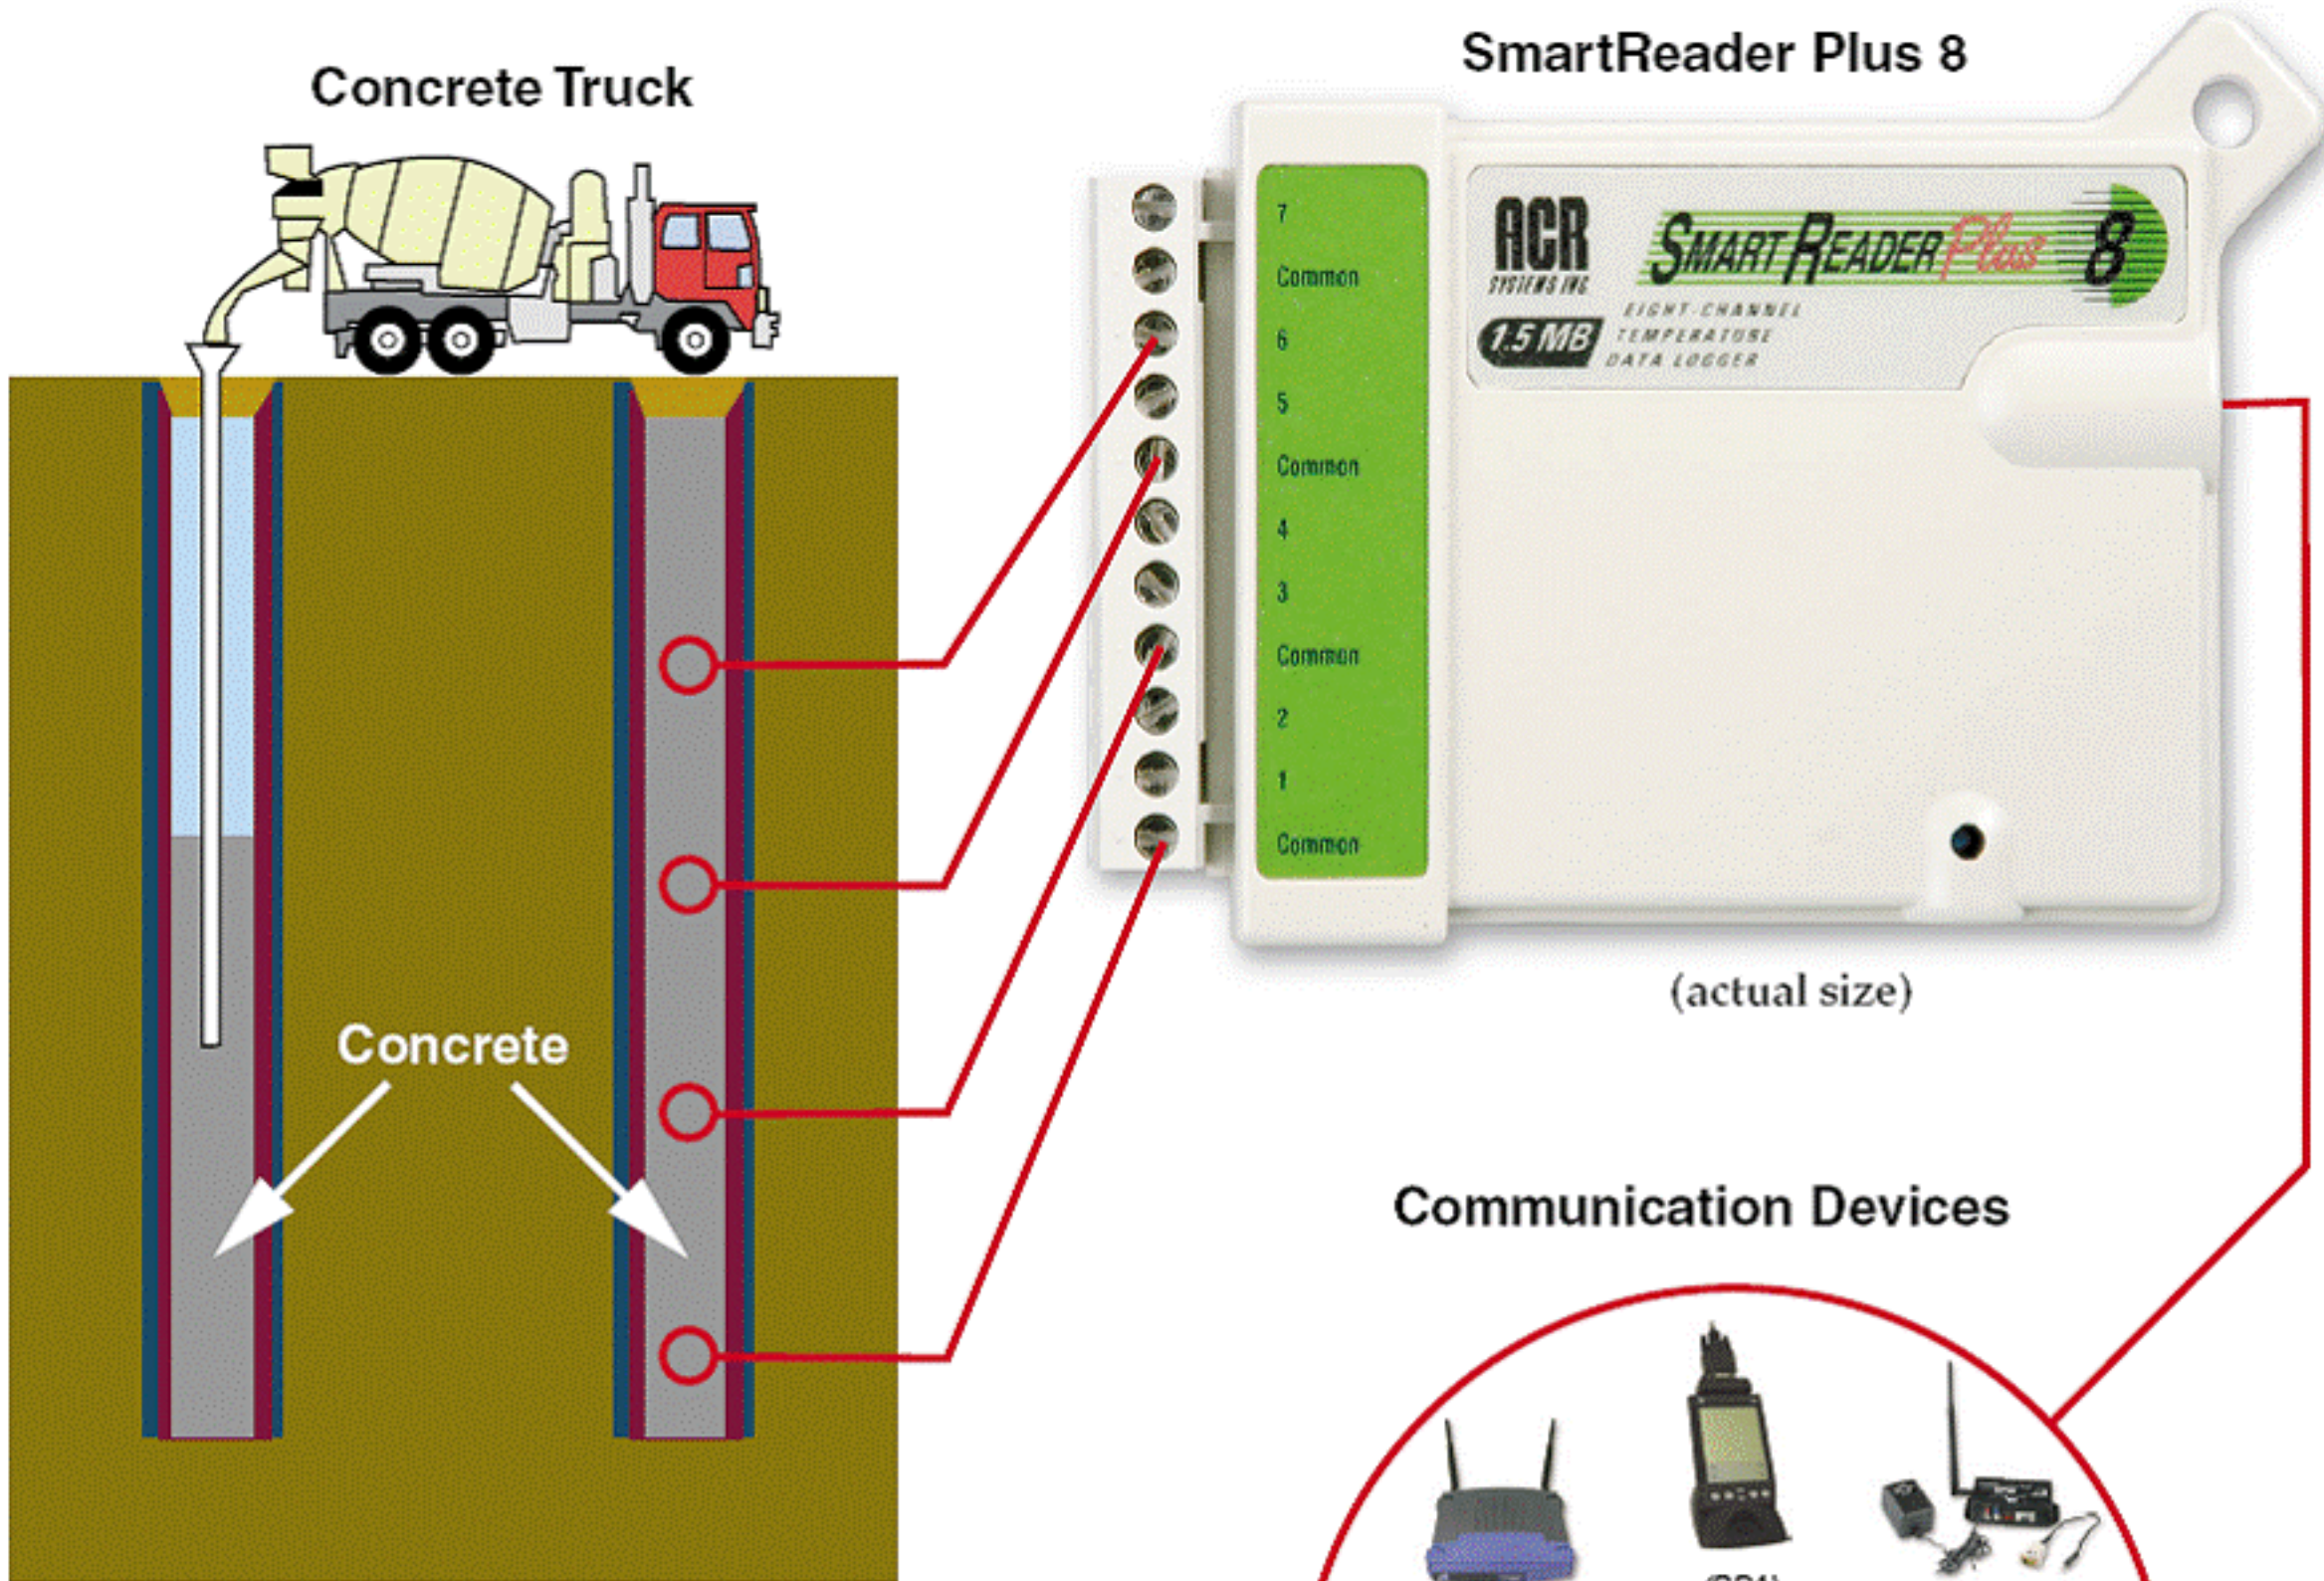

(actual size)

Communication Devices

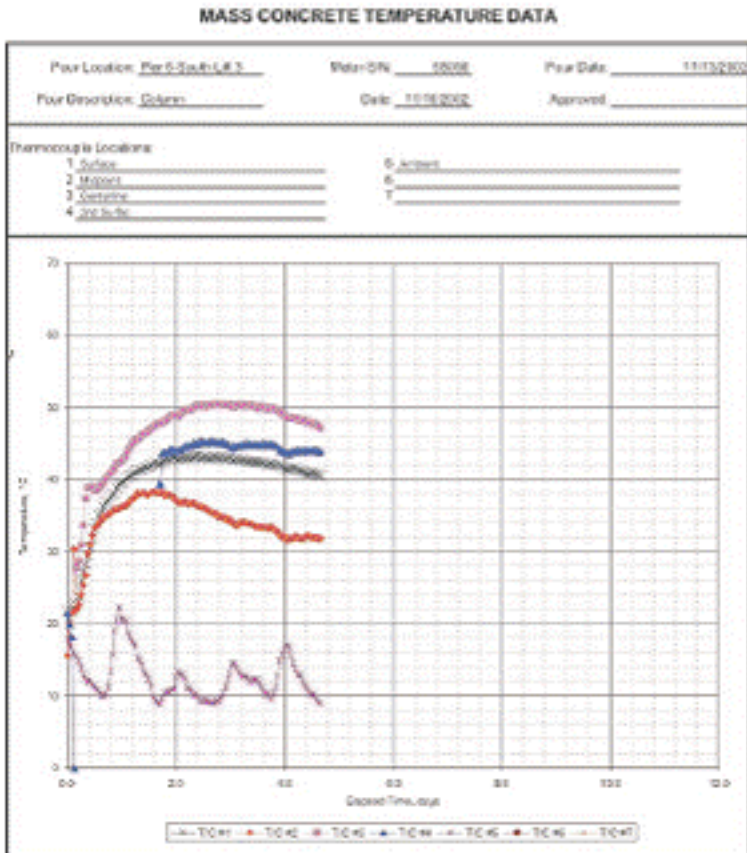

ASTM C1074-98 5. Significance and Use

5.1 This practice can be used to estimate the in-place strength of concrete to allow the start of critical construction activities such as: (1) removal of formwork and reshoring; (2) post-tensioning of tendons; and (3) termination of cold weather protection.