

User's Guide



Visit us at www.TestEquipmentDepot.com



Back to the Extech 401050 Product Page

EXTECH
INSTRUMENTS

Model 401050 AC/DC Voltage Detector



Safety Precautions

1. Improper use of this meter can cause damage, shock, injury or death. Read this guide before use.
2. The tester should not be used to test voltages above the stated ranges.
3. Secure the battery compartment screw before use.
4. Inspect the condition of the tester for any damage before use.
5. Remove the batteries from the meter if the meter is to be stored for long periods.
6. For Indoor use only

International Safety Symbols




Refer to the user's guide for information.



Hazardous voltages may be present

Battery Replacement

1. Using a screwdriver, remove the battery compartment screw cap (end of handle) to access the batteries.
2. Remove the spring from inside the battery compartment and set it aside.
3. Remove the batteries, noting their polarity and orientation.
4. Insert the two new LR41 batteries in the same orientation and polarity. The positive + side of both batteries must be facing up toward the opening of the battery compartment. If the batteries are not replaced in this position, the instrument will not operate.
5. Replace the battery compartment spring.
6. Replace and secure the compartment screw cap.

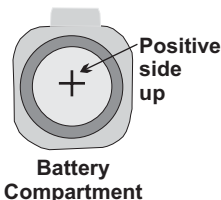

Specifications


AC Voltage (contact) test.....	70 to 250VAC
AC Voltage (non-contact) test.....	70 to 600VAC (single sheathed insulation, single conductor)
DC Voltage / Polarity test.....	1.5V to 36V
Continuity test.....	0 to 5M ohms
Batteries.....	Two (2) LR41

Operation

WARNING: Risk of Electrocutation. Always verify the detector on a known live circuit first.


Self Test

Touch the tip of the driver blade with one hand and the battery compartment cover with the other hand at the same time. The Red indicator should blink if the detector is operational. If the indicator does not light, check the batteries.

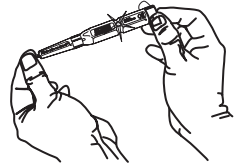


AC Voltage Test – Contact Method (70 – 250VAC)

Touch the driver blade tip to the live/hot AC conductor. **Note** that some receptacle contacts are deeply recessed; be sure that good contact is being made with the conductor before completing the test. The Red indicator will blink in the presence of voltage.

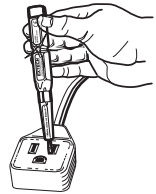

AC Voltage Test – Non-contact Method (70 to 600V)

To locate the Hot/Live side of a wire, trace the tester along the wire. The Red indicator will flash in the presence of voltage. To increase the sensitivity, read the next section

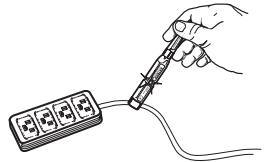

Sensitivity Adjustment (Non-contact AC Voltage testing only)


LOW SENSITIVITY: Touch the battery compartment cover while testing

HIGH SENSITIVITY: Hold the driver tip and use the battery compartment cover end for testing

DC Voltage / Polarity Test (1.5V to 36VDC)

CAUTION: Be sure to disconnect any AC Mains or High Voltage before proceeding.


Press the driver tip to the positive side of the device under test. Touch the battery compartment screw with one hand and, with the other hand, touch the negative side of the device under test. The Red indicator will blink to indicate the presence of DC voltage and that the polarity is positive. If the polarity of the device under test is reversed, the Red indicator will not light.

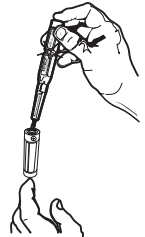

Continuity Test

CAUTION: Be sure to disconnect any AC Mains or High Voltage before proceeding.

Press the driver blade to one side of the object under test. Place one hand on the battery compartment screw and the other hand on the other side of the object under test. The Red indicator will blink if there is continuity from one side of the object under test to the other.

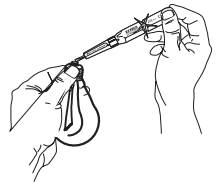

Model 401050 Version 2.0 11/05