

Test Equipment Depot
99 Washington Street
Melrose, MA 02176-6024

FLUKE®

www.testequipmentdepot.com

800-517-8431

781-665-0780 FAX

7-600

Electrical Tester *Instruction Sheet*

Read First: Safety Information

To ensure that the tester is used safely, follow these instructions:

- Do not use the tester if the tester or test leads appear damaged, or if you suspect that the tester is not operating properly.
- Disconnect the live test lead before disconnecting the common test lead.
- When using the probes, keep your fingers behind the finger guards on the probes.
- Do not use the tester to measure voltages in circuits that could be damaged by the tester's low input impedance ($\cong 2 \text{ k}\Omega$).
- Turn off power to the circuit under test before cutting, desoldering, or breaking the circuit. Small amounts of current can be dangerous.
- Do not apply more than 600V rms between a 7-600 tester terminal and earth ground.
- Use caution when working with voltages above 60V dc or 30V ac rms. Such voltages pose a shock hazard.

Automatic Selection


The tester automatically selects the appropriate measurement mode and range. When turned on, the tester powers up in resistance/continuity mode. If a dc or ac voltage greater than about 4.5V is present across the inputs, the tester switches to dc or ac voltage mode.

⚠ Warning



Repetitive transients on a dc bus will cause Automatic Selection (V) to select ac volts, even though a hazardous dc voltage may be present.

In dc and ac voltage modes, the tester has low input impedance **(between $\approx 2\text{ k}\Omega$ and $100\text{ k}\Omega$)**. This low impedance, which places a moderate load on the circuit under test, is appropriate only for measuring power supply voltages under load. Do not use the tester to measure voltage in circuits that could be damaged by a $2\text{ k}\Omega$ load.

Continuity




Resistance

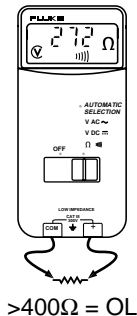


DC and AC Voltage

Refer to Automatic Selection.

Volts dc >4.5V
Input Impedance $\cong 2 \text{ k}\Omega$



Volts ac >4.5 VRMS
Input Impedance $\cong 2 \text{ k}\Omega$



ah02i.eps


Standby Mode

If the tester is on but inactive and not connected to voltage for more than 45 min, the display goes blank to preserve battery life. To resume operation, switch the tester OFF for 2 seconds or more; then switch the tester on.

Maintenance

Clean the case with a damp cloth and detergent. Do not use abrasives or solvents.

Battery Replacement

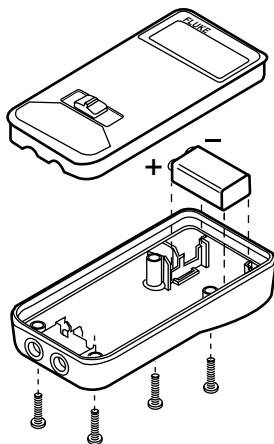

ah03i.eps

Test Lead Replacement (Indicates double insulation.)

Replace the test leads with Fluke TL-75 PN 855705 double-insulated leads.

Specifications

Maximum Voltage Between any Terminal and Earth Ground	600 V rms
Display	3 3/4-digits, 4000 counts, updates 4/sec
Operating Temperature	-10°C to 50°C (14°F to 122°F)
Storage Temperature	-30°C to 60°C (-22°F to 140°F) indefinitely (to -40°C (-40°F) for 100 hrs)
Temperature Coefficient	0.1 x (specified accuracy)/°C (<18°C or >28°C; <64°F or > 82°F)
Relative Humidity	0% to 90% (-10°C to 35°C; 14°F to 95°F) 0% to 70% (35°C to 50°C; 95°F to 122°F)
Battery Type	9V, NEDA 1604 or IEC 6F22
Battery Life	650 continuous hours with alkaline 450 continuous hours with carbon-zinc
Shock, Vibration	1 meter shock. Per MIL-T-28800D for a Class 3 instrument
Size (HxWxL)	3.46 cm x 7.05 cm x 14.23 cm (1.35 in x 2.75 in x 5.55 in)
Weight	286g (10 oz)
Safety	Designed to Protection Class II requirement of UL3111, ANSI/ISA-S82, CSA C22.2 No 231, and VDE 0411, and IEC 1010 overvoltage Category III (CAT III).
EMI Regulations	Complies with FCC Part 15, Class B, and VDE 0871B.



Trademark of TÜV Product Services.
Complies with EN 61010-1: 1993.

Accuracy is specified for a period of one year after calibration, at 18°C to 28°C (64°F to 82°F) with relative humidity to 90%. AC conversions are ac-coupled, average responding, and calibrated to the rms value of a sine wave input. Accuracy specifications are given as follows:

\pm ([% of reading] + number of least significant digits)

Function	Range	Resolution	Accuracy (50 to 400 Hz)
V_~	40.00V	00.01V	\pm (2.9% + 3)
	300.0V (7-300)	00.1V	\pm (2.9% + 3)
	400.0V (7-600)	000.1V	\pm (2.9% + 3)
	0600V (7-600)	0001V	\pm (2.9% + 3)
V₋₋₋	40.00V	00.01V	\pm (1.5% + 1)
	300.0V (7-300)	00.1V	\pm (1.5% + 1)
	400.0V (7-600)	000.1V	\pm (1.5% + 1)
	0600V (7-600)	0001V	\pm (1.5% + 1)
Ω^*	400.0 Ω	000.1 Ω	\pm (1.5% + 2)
* The beeper typically comes on at <25 Ω and turns off at >400 Ω .			

Function	Overload Protection	*Input Impedance (Nominal)
V_{\sim}	600V rms	>2 k Ω , 200 pF ac-coupled
$V_{\text{---}}$	600V rms	>2 k Ω , 200 pF
Ω	600V rms	NA
* \cong 2 k Ω input impedance up to 50V. Impedance increases with input voltage to >300 k Ω at 600V.		

Test Equipment Depot
99 Washington Street
Melrose, MA 02176-6024

www.testequipmentdepot.com
800-517-8431
781-665-0780 FAX

LIMITED WARRANTY & LIMITATION OF LIABILITY

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is two years and begins on the date of shipment. Parts, product repairs and services are warranted for 90 days. This warranty extends only to the original buyer or end-user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries or to any product which, in Fluke's opinion, has been misused, altered, neglected or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on non-defective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country.

Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center or send the product, with a description of the difficulty, postage and insurance prepaid (FOB Destination), to the nearest Fluke authorized service center. Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that the failure was caused by misuse, alteration, accident or abnormal condition of operation or handling, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work. Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, WHETHER ARISING FROM BREACH OF WARRANTY OR BASED ON CONTRACT, TORT, RELIANCE OR ANY OTHER THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.